Product Presentation 22KW Three-Phase AC EV Charger ALW-EVC003



Emergency stop

Ethernet Indicator li

Indicator light / Swipe card

Basic Parameters

parameter	
Working voltage	AC400V(L1+L2+L3+N+PE)
Frequency	50HZ
Rated power	22kW
IP Degree	IP65
Use environment	
Working temperature	-25℃—+45℃
Working humidity	5%~95%HR
The cooling way	Natural air cooling
Display function	
Display parameters	Charge voltage, charge current, charge quantity, fault code.
Physical size	
Fuselage size	355*250*93mm
Installation mode	Column mounted (floor mounted) or wall mounted Install optional





Display and Light Signal



green light (always on): stand by (waiting) status



blue light (flashing): charging blue light (always on): completed



red light (blinking): fault

APP Smart Life and Video Instruction



Download method



Open the app downloader

Step 1:

Open the app downloader

Type Smart Life in the search bar and click Install



Confirm the user agreement and privacy policy

Step 1:

Click Open when the download is complete After reading the user agreement and privacy policy Click Agree



Sign up and log in

Step 3:

After agreeing to the platform agreement Automatically jump to the login screen

Registration

Note: You can also choose to use third-party platforms to log in.







Click on the register Jump to the registration interface Step 2:

Enter phone number or Email Click to get the CAPTCHA





Enter Verfication Code

Step 3:
Type Captcha

Set Password

Step 4:

Set password 6 to 20 characters

Add Device



Confirm permission

Step 1:

Click "Go to App"



Add Device

Step 2: Click + on the top right of the page Click Add Device



Confirm Location permission

Step 3:

Type Captcha



Search Device

Step 4:

Turn on Bluetooth or WIFI The first time you connect a device

Match the phone with the device on the same WIFI

Charging Step



Charging mode Real line starge phate 4 222.7 Û

Swipe right to charge

Slide the button right to charge

Data in charge

.

Charging pile

(Jong eg

al 7 🗉

0

18:32

Č

Step 2: Access to charging data (Voltage/Current/Power)



Click to turn off the power

Step 3:

Click button to turn off the power



Recharge record

Step 4:

Click the record icon

View charging records and data

Schedule





.

Greate Scene

Tap-to-Run Factorie frond Tallföglis to belief

When weather changes Damive, when ocal temperature is greater than 2810.

Create Scene

Step 1:

Click + on the top right of the page Click Create Scene

Step 2:

Schedule

Click Schedule to charge



Execution Time

Step 3:

Slide digital adjustment up and down Slide to the time you want to charge You can choose Monday to Sunday Otherwise,the action will be only once



Recharge record

Step 4:

Add the schedule time to the Then Click save

Adjust current

18:33 Churg	all 중 표 jing pile	_ _
Charging current	374 >	Ì
Alarm setting	4	ງ
Current temperature	3002	Ī
Positive local active p	cawar 0.0° Wh	
Device number	8500221000022301	
Version number	100	



.

Setting

Step 1:

Click the Setting icon Click the Charging current

Adjust Current

Step 2:

Slide up and down to the current you want to adjust Remember to Click Confirm



Alarm Setting

Step 3:

Click the Alarm setting



Setting Alarm

Step 4:

Set the overcurrent protection according to the needs of the car